

Warranty Information

This product has a limited 3 year warranty in North America, Europe, and Australia.
For information on warranty periods in other regions, please contact your reseller or SilverStone authorized distributor.

Warranty terms & conditions

- Product component defects or damages resulted from defective production is covered under warranty.
Defects or damages with the following conditions will be fixed or replaced under SilverStone Technology's jurisdiction.
 - Usage in accordance with instructions provided in this manual, with no misuse, overuse, or other inappropriate actions.
 - Damage not caused by natural disaster (thunder, fire, earthquake, flood, salt, wind, insect, animals, etc. ...)
 - Product is not disassembled, modified, or fixed. Components not disassembled or replaced.
 - Warranty mark/stickers are not removed or broken.Loss or damages resulted from conditions other than ones listed above are not covered under warranty.
- Under warranty, SilverStone Technology's maximum liability is limited to the current market value for the product (depreciated value, excluding shipping, handling, and other fees). SilverStone Technology is not responsible for other damages or loss associated with the use of product.
- Under warranty, SilverStone Technology is obligated to repair or replace its defective products. Under no circumstances will SilverStone Technology be liable for damages in connection with the sale, purchase, or use including but not limited to loss of data, loss of business, loss of profits, loss of use of the product or incidental or consequential damage whether or not foreseeable and whether or not based on breach of warranty, contract or negligence, even if SilverStone Technology has been advised of the possibility of such damages.
- Warranty covers only the original purchaser through authorized SilverStone distributors and resellers and is not transferable to a second hand purchaser.
- You must provide sales receipt or invoice with clear indication of purchase date to determine warranty eligibility.
- If a problem develops during the warranty period, please contact your retailer/reseller/SilverStone authorized distributors or SilverStone <http://www.silverstonetek.com>.
Please note that: (i) You must provide proof of original purchase of the product by a dated itemized receipt; (ii) You shall bear the cost of shipping (or otherwise transporting) the product to SilverStone authorized distributors. SilverStone authorized distributors will bear the cost of shipping (or otherwise transporting) the product back to you after completing the warranty service; (iii) Before you send the product, you must be issued a Return Merchandise Authorization ("RMA") number from SilverStone. Updated warranty information will be posted on SilverStone's official website. Please visit <http://www.silverstonetek.com> for the latest updates.

Additional info & contacts

For North America (usasupport@silverstonetek.com)

SilverStone Technology in North America may repair or replace defective product with refurbished product that is not new but has been functionally tested. Replacement product will be warranted for remainder of the warranty period or thirty days, whichever is longer. All products should be sent back to the place of purchase if it is within 30 days of purchase, after 30 days, customers need to initiate RMA procedure with SilverStone Technology in USA by first downloading the "USA RMA form for end-users" form from the below link and follow its instructions.
<http://silverstonetek.com/contactus.php>

For Australia only (support@silverstonetek.com)

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law.
You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage.
You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
Please refer to above "Warranty terms & conditions" for further warranty details.

SilverStone Technology Co., Ltd, 12F No. 168 Jankang Rd., Zhonghe Dist., New Taipei City 235 Taiwan R.O.C. + 886-2-8228-1238
(standard international call charges apply)

For Europe (supportLeu@silverstonetek.de)
For all other regions (support@silverstonetek.com)



SILVERSTONE[®]
Designing Inspiration

ARGON SERIES

Advanced heatsink with Heat-pipe Direct Contact (HDC) technology


Great balance of silence and performance

Heat-pipe direct contact (HDC) technology

Innovative anti-vibration fan mountings for easy installation and silent operation

Includes compact PWM fan for excellent cooling and low noise


Intel Socket LGA 775/115X/1366/2011 and AMD Socket AM2/AM3/FM1/FM2 compatible

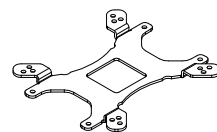

Back Plate



 Washer



Standoff



 
Thumb Nut




LGA2011 Standoff




Hexagon Nut



INTEL Clip

 


AMD Clip

 

Rubber Rivet



 Thermal Grease



Crossbar



Hexagon Handle

SilverStone Technology Co., Ltd.

 
www.silverstonetek.com

All trademarks are registered to their respective owners.



© 2012 SilverStonetek Co., Ltd. All Rights Reserved.

NO.G11218030


- 安装前请先确定主板孔位。
- 安装前请先确定主板孔位。
- Confirm the motherboard socket type before installation
- Vor der Installation Motherboard-Sockettyp überprüfen
- Confirme el tipo de zócalo de la placa base antes de la instalación
- Confirmer le type de fiche de la carte mère avant installation
- Confermare il tipo di socket della scheda madre prima dell'installazione
- インストール前にマザーボードのソケットのタイプを確認してください。
- 설치 전에 메인보드 소켓 유형을 확인합니다.
- Перед тем как приступить к установке, проверьте тип разъема процессора на материнской плате.




- 依照主板对应的孔位，选用Intel/AMD的扣具。将扣具孔位对准等高柱螺丝，并放置于等高柱上。
- 依照主板对应的孔位，选用Intel/AMD的扣具。将扣具孔位对准等高柱螺丝，并放置于等高柱上。
- Install Intel/AMD mounting clip onto the knurled screws
- Intel/AMD-Montageklemme an den gerändelten Schrauben installieren
- Instale el clip de montaje Intel/AMD en los tornillos moleteados
- Installez les clips de montage Intel / AMD sur les vis motetés
- Installare il morsetto di fissaggio Intel/AMD sulle viti a testa zigrinata
- Intel/AMDマウントクリップをきざみ付きネジに取り付けます。
- 등근 나사 위에 Intel/AMD 장착 클립을 설치합니다.
- На винты с накатанной головкой установите монтажную скобу для процессора Intel или AMD.

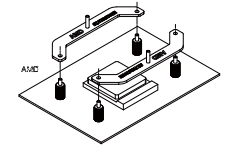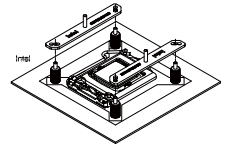


- 將墊片圓孔對準主機板的圓孔，並將墊片放置於主機板上。
- 將墊片圓孔對準主機板的圓孔，並將墊片放置於主機板上。
- Place the rubber cushion according to the socket type onto the motherboard
- Gummipolster entsprechend dem Sockettyp auf dem Motherboard platzieren
- Sitúe la almohadilla de goma según el tipo de zócalo de su placa base
- Placez le coussinet en caoutchouc en suivant le type de fiche sur la carte mère
- Collocare il cuscinetto di gomma secondo il tipo di socket sulla scheda madre
- ソケットのタイプに応じてマザーボード上にゴム製クッションを置きます。
- 소켓 유형에 따라 고무 쿠션을 메인보드에 맞춥니다.
- Выберите резиновую прокладку в соответствии с типом разъема процессора и установите прокладку на материнскую плату.

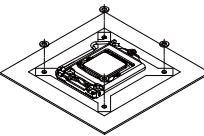


- 將T型螺帽沿著扣具螺絲鎖緊扣具。
- 將T型螺帽沿著扣具螺絲鎖緊扣具。
- Install the T-nuts onto the mounting-clip
- T-Muttern an der Montageklemme installieren
- Instale las tuercas en T en el clip de montaje
- Installez les écrous en T sur le clip de montage
- Installare i dadi a T sul morsetto di fissaggio
- Tナットをマウントクリップに取り付けます。
- 장착 클립 위에 T 너트를 설치합니다.
- На монтажную скобу установите носковые гайки.

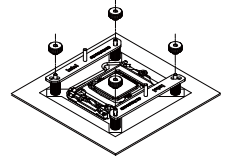


- 將等高柱螺絲沿著墊片圓孔與主機板鎖固。
- 將等高柱螺絲沿著墊片圓孔與主機板鎖固。
- Install the knurled threaded screws through the rubber cushion and fasten the screws on the motherboard
- Gerändelte Gewindeschrauben durch das Gummipolster installieren, Schrauben am Motherboard festziehen
- Instale los tornillos de cabeza moleteada a través de la almohadilla de goma y fije los tornillos a la placa base
- Installez les pas de vis motetés avec le coussinet en caoutchouc en fixez les vis de la carte mère
- Installare le viti a testa zigrinata attraverso il cuscinetto di gomma e serrarle sulla scheda madre
- きざみ付きネジをゴム製クッションに通し、マザーボードに固定します。
- 등근 나사를 고무 쿠션을 통과하게 설치하고 나사를 조여 메인보드에 고정합니다.
- Заверните винты с накатанной головкой в отверстия в прокладке и материнской плате.

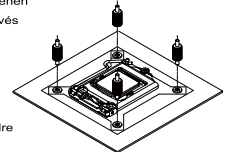


- 將散熱器底部保護貼撕離。將散熱器本體放置於CPU上。
- 將散熱器底部保護貼撕離。將散熱器本體放置於CPU上。
- Remove the film from the cooler base and place it on the CPU.
- Folie von der Kühlerbasis entfernen, diese an der CPU anbringen.
- Retire la película de la base de refrigeración y sitúela en la CPU.
- Retirez le film de la base de refroidissement et placez-le sur le CPU.
- Rimuovere la pellicola dalla base del dissipatore di calore e collocarlo sulla CPU.
- クーラーベースからフィルムをはがし、CPUに貼ります。
- 물림대에서 필름을 제거하고 발침대를 CPU에 올려 놓습니다.
- Снимите пленку с основания радиатора и установите радиатор на процессор.

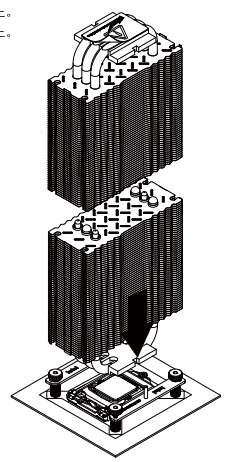

- 塗抹導熱膏前，請先清潔CPU表面，取出導熱膏後，並將導熱膏均勻塗抹在CPU上。
- 塗抹導熱膏前，請先清潔CPU表面，取出導熱膏後，並將導熱膏均勻塗抹在CPU上。
- Please clean the surface of CPU then apply thermal grease evenly on CPU.
- Reinigen Sie bitte die Oberfläche der CPU bevor Sie die Wärmeleitpaste gleichmäßig auftragen.
- Por favor, limpie la superficie del microprocesador antes de aplicar la pasta térmica. Una vez limpio, aplíquela de manera uniforme sobre la CPU.
- Please clean the surface of CPU then apply thermal grease evenly on CPU.
- Pulire la superficie della CPU prima di applicare la pasta termica e quindi applicare pasta termica in modo uniforme sulla CPU.
- サーマルグリスを塗る前に、CPUの表面を清潔にして、CPU上にサーマルグリスを均一に塗ります。
- 씨멀 그리스를 바르기 전에 CPU 표면을 청소한 후 씨멀 그리스를 CPU에 고르게 바르십시오.
- На очищенную поверхность процессора равномерно нанесите термопасту.

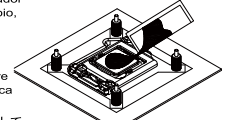

- 將鉛壓板從散熱器下方穿過，並將鉛壓板上的柱子對準散熱器鉛底的孔，以及將鉛壓板孔位對準扣具螺絲。
- 將鉛壓板從散熱器下方穿過，並將鉛壓板上的柱子對準散熱器鉛底的孔，以及將鉛壓板孔位對準扣具螺絲。
- Install the crossbar above the heatsink's base. And place the crossbar onto the mounting clips' screw holes.
- Kreuzschiene über der Basis des Kühlkörpers installieren. Kreuzschiene auf den Schraubenlöchern der Montageklammern platzieren.
- Instale la barra cruzada sobre la base del dissipador y sitúe la barra cruzada sobre los agujeros de tornillos de los clips de montaje
- Installez-la barre transversale sur la base du dissipateur. Et placez la barre transversale sur les trous de vis des clips de montage.
- Montare la traversa sopra la base del dissipatore. E collocare la traversa sui fori per le viti dei morsetti di fissaggio.
- 히트싱크베이스에 크로스바를取り付けます。それから크로스바를マウントクリップの穴に設置します。
- 방열판 받침대 위에 크로스바를 설치합니다. 장착 클립의 나사 구멍에 크로스바를 올려 놓습니다.
- Установите поперечину на основание радиатора. Совместите отверстия поперечины с отверстиями для винтов в монтажной скобе.


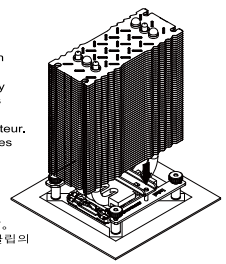


Manual


Manual

- 依照主機板對應的孔位，選用Intel/AMD的扣具。將六角螺帽沿著扣具螺絲鎖緊鉛壓板。
- 依照主機板對應的孔位，選用Intel/AMD的扣具。將六角螺帽沿著扣具螺絲鎖緊鉛壓板。
- Attach the nut onto the mounting clips.
- Mutter an den Montageklammern anbringen.
- Enganche la tuerca en los clips de montaje.
- Fissare il dado sui morsetti di fissaggio.
- ナットをマウントクリップに付けます。
- 너트를 장착 클립에 연결합니다.
- Установите гайки на монтажные скобы.


- 使用十字起子或六角板手套入六角螺帽，使六角螺帽將鉛壓板固定為止。
- 使用十字起子或六角板手套入六角螺帽，使六角螺帽將鉛壓板固定為止。
- Secure the nuts onto the crossbar with a screwdriver or Allen key.
- Muttern mit einem Schraubendreher oder Inbusschlüssel an der Kreuzschiene befestigen.
- Fije las tuercas en la barra con un destornillador ó llave Allen
- Fixez les écrous sur la barre transversale avec un tournevis ou avec une clé Allen.
- Fissare i dadi sulla traversa usando un cacciavite o chiave a brugola.
- 드라이버またはAllenキーでナットをクロスバーに取り付けます。
- 스크루드라이버 또는 알렌 키를 사용하여 너트를 크로스바에 고정합니다.
- Затяните гайки на поперечине отверткой или шестигранным ключом.

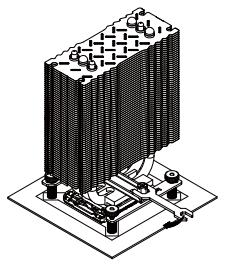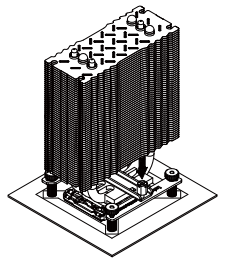

- 將塑膠防震墊片固定到風扇上
- 將塑膠防震墊片固定到風扇上
- Secure the anti-vibration rubber mounting onto the fan.
- Vibrationsdämpfende Gummifassung am Lüfter befestigen.
- Fije la goma anti vibración en el ventilador
- Fixez le caoutchouc de montage anti vibrations sur le ventilateur.
- Fissare la gomma anti-vibrazione sulla ventola.
- 防振ゴムパッドをファンに取り付けます。
- 팬 위에 장착되는 방진 고무를 고정합니다.
- Закрепите антивибрационное крепление на вентиляторе.

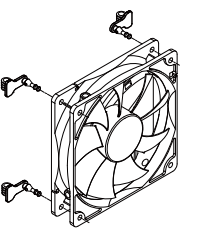

- 將風扇的塑膠防震墊片放入散熱片上
- 將風扇的塑膠防震墊片放入散熱片上
- Secure the anti-vibration rubber mounting into the heatsink's fins.
- Vibrationsdämpfende Gummifassung an den Lamellen des Kühlkörpers befestigen.
- Fije la goma anti vibración a las aletas del dissipador
- Fixez le caoutchouc de montage anti vibrations sur les ailettes du dissipateur.
- Fissare l'attacco gomma anti-vibrazione sulle alette del dissipatore.
- 防振ゴムパッドをヒートシンクのフィンに取り付けます。
- 방열판의 핀에 장착되는 방진 고무를 고정합니다.
- Закрепите антивибрационное крепление на ребрах радиатора.

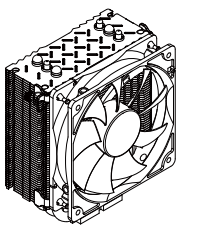

Manual

Fan mounting